
 
















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|---------------|
|  | RCVR On |  | Power |
|  | RCVR Standby |  | Shift + Power |
|  | RCVR Sleep |  | Sleep |
|  | RCVR Return |  | Back |
|  | RCVR Setup |  | Options |
|  | RCVR Disc+ |  | Ch + |
|  | RCVR Disc- |  | Ch - |
|  | RCVR Up |  | Up |
|  | RCVR Left |  | Left |
|  | RCVR Enter |  | Ok |
|  | RCVR Right |  | Right |
|  | RCVR Down |  | Down |
|  | RCVR Vol+ |  | Vol + |
|  | RCVR Vol- |  | Vol - |
|  | RCVR Muting |  | Mute |
|  | RCVR CH Sel / Top Menu |  | Shift + Menu |
|  | RCVR CH Sel / Top Menu |  | D. Menu |

Originalfernbedienung Ersatzfernbedienung


 
 
 
| | | | |
|---|------------------------|---|-------|
|  | RCVR Test / Menu |  | Menu |
|  | RCVR Audio |  | Dual |
|  | RCVR Level |  | Media |
|  | RCVR Level Up |  | Smart |
|  | RCVR I<< |  | I<< |
|  | RCVR Play |  | Play |
|  | RCVR >>I |  | >>I |
|  | RCVR << |  | << |
|  | RCVR Stop |  | Stop |
|  | RCVR >> |  | >> |
|  | RCVR Rec / |  | Rec |
|  | RCVR Pause / Play Rev. |  | Pause |
|  | Open / Close |  | Eject |
|  | RCVR Input Sel. |  | 1 |
|  | RCVR Input Sel. |  | 2 |
|  | RCVR Input Sel. |  | 3 |
|  | RCVR Input Sel. |  | 4 |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------|
|  | RCVR Input Sel. |  | 5 |
|  | RCVR Input Sel. |  | 6 |
|  | RCVR Input Sel. |  | 7 |
|  | RCVR Input Sel. |  | 8 |
|  | RCVR Input Sel. |  | 9 |
|  | RCVR Input Sel. |  | 0 |
|  | RCVR Stereo |  +  | Shift + 1 |
|  | RCVR Direct |  +  | Shift + 2 |
|  | RCVR DSP ► |  +  | Shift + 3 |
|  | RCVR SURR |  +  | Shift + 4 |
|  | RCVR THX |  +  | Shift + 5 |
|  | RCVR ◀ DSP |  +  | Shift + 6 |
|  | RCVR SP A |  +  | Shift + 7 |
|  | RCVR SP B |  +  | Shift + 8 |
|  | RCVR Re-EQ |  +  | Shift + 9 |
|  | RCVR Dimmer |  +  | Shift + 0 |
|  | RCVR Display |  | Info |



 










 













 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | RCVR Display |  | Guide |
|  | RCVR Zone 2 |  | Pre Ch |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


 

 

 


 








 




 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------------|
|  | ON |  | Power |
|  | STDBY |  | Shift + Power |
|  | Return |  | Back |
|  | Setup |  | Options |
|  | Disc+ |  | Ch + |
|  | Disc- |  | Ch - |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Muting |  | Mute |
|  | Top Menu |  | D. Menu |
|  | Menu |  | Menu |
|  | Angle |  | Format |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Subtitle |  | Subt |
|  | I<< |  | I<< |
|  | Play |  | Play |
|  | >>I |  | >>I |
|  | << |  | << |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | Random |  | Text |
|  | Pause |  | Pause |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------|--------|----------------|-------|
| 8 SPB | 8 | 8 | 8 |
| 9 Re-EQ | 9 | 9 | 9 |
| 0 DIMMER | 0 | 0 | 0 |
| +10 DISPLAY | +10 | /-- | Guide |
| SEARCH ZONE ? ENTER | Search | SEARCH TV/R | TV/R |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |


 

 



 





 



 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | ON |  | Power |
|  | STDBY |  | Shift + Power |
|  | Disc+ |  | Ch + |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Muting |  | Mute |
|  | I<< |  | I<< |
|  | Play |  | Play |
|  | >>I |  | >>I |
|  | << |  | << |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | Random |  | Text |
|  | Pause |  | Pause |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----|---|-------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |


 

 



 





 

 


 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | ON |  | Power |
|  | STDBY |  | Shift + Power |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Muting |  | Mute |
|  | I<< |  | I<< |
|  | Play |  | Play |
|  | >>I |  | >>I |
|  | << |  | << |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | Rec / Random |  | Text |
|  | Rec / Random |  | Rec |
|  | Pause |  | Pause |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------|--|--------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |
|  | Enter |  | Pre Ch |
|  | Enter |  | Ok |

