 
 
 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	STANDBY/ON		Power
	REPEAT / FM		Text
	REPEAT A-B		Eject
	SHUFFLE		D. Menu
	VOL +		Vol +
	VOL -		Vol -
	PLAY/PAUSE		Play
	STOP		Stop
	∧		Up
	</I<</TUNING -		I<<
	</I<</TUNING -		Left
	ENTER		Ok
	>/>>I/TUNING		>>I
	>/>>I/TUNING		Right
	∨		Down
	MENU		Menu
	MUTE		Mute

Originalfernbedienung Ersatzfernbedienung

	PROGRAM		Sleep
	S.BASS		Dual
	CLOCK		AV
	DIMMER		Guide
	SLEEP/TIMER		Format

