
 







 

 

 
 
 


 

 


 
 
 
 
 




 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	C		Pre Ch
	Multi Window		Smart
	Aspect		Format
	SRS		Dual
	SD		Media
	Mute		Mute
	TV/AV		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Text		Text
	F.P.		3D
	Index		TV/R
	Hold		Shift + Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / VCR		0
	N		Options



