
 


 

 
 
 



 

 
 


 
 


 




 
 


 
 
 







 

 

 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Down		Ch -	
Slow Up		Ch +	
Pause		Pause	
Auto/Track		Smart	
Stop		Stop	
Subt.		Subt	
Title		List	
Rep/A-B		TV/R	
Pepeat/1/All		Text	
Zoom		Shift + Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Return		Back	
Menu Left		Left	
OK Enter		Ok	
Progr.		Sleep	
Next		>>	
Menu Right		Right	
Prev.		<<	
Menu Down		Down	
Volume+		Vol +	
Volume-		Vol -	
Top Menu		D. Menu	
1		1	
2		2	
3		3	
4		4	
5		5	
Store		Red	
6		6	



 

 

 


 









Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Digest		Angle	 Format
7		Np	 +  Shift + Subt
Open/Close		Info	 +  Shift + Info
8			
9			
Clear/00:00			
+10			
Record			
Auto Scan			
Rewind			
Play			
F.Forward			
Setup			
Audio			
3D			
0			
C/CH			





 
 
 
 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Stop		Stop
Pause		Pause
Slow Up		Ch +
Slow Down		Ch -
Subt.		Subt
Auto/Track		Sleep
Rep/A-B		TV/R
Zoom	 + 	Shift + Eject
Title		List
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left


 




 
 




 



 

 


 
 
 


 




 


 
Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Menu Right		Right
Return		Exit
Menu Down		Down
Progr.		Back
Volume+		Vol +
Top Menu		D. Menu
Next		>>I
Volume-		Vol -
1		1
2		2
3		3
Prev.		I<<
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			8
Video			Smart
9			9
+10			Guide
0			0
C/CH			Pre Ch
Rewind			<<
Random			Media
Angle			Format
R/L	 + 		Shift + Info
Play			Play
Record			Rec
F.Forward			>>
3D			3D
Open/Close			Eject
Audio			Dual



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Down		Ch -	
Slow Up		Ch +	
Auto/Track		Smart	
Stop		Stop	
Subt.		Subt	
Pause		Pause	
Zoom	 + 	Shift + Eject	
Title		List	
Rep/A-B		TV/R	
Pepeat/1/All		Text	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Return		Back	
Menu Down		Down	
Next		>>	
Progr.		Sleep	
Volume+		Vol +	
Top Menu		D. Menu	
Volume-		Vol -	
Prev.		<<	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
Open/Close		Eject	
Mode		Media	
9		9	
Setup		Options	
+10		Guide	
3D		3D	
0		0	
C/CH		Pre Ch	
Play/Back	 + 	Shift + Left	
Resume	 + 	Shift + Play	
Play		Play	
Karaoke/Step	 + 	Shift + Pause	
Np	 + 	Shift + Subt	
Record		Rec	
F.Forward		>>	
Rewind		<<	
Store	 + 	Shift + Down	
Angle		Format	
Lang		Dual	

