







 









**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Source		AV / Input / RDS

**Originalfernbedienung Ersatzfernbedienung**





**Originalfernbedienung Ersatzfernbedienung**

























	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

**Originalfernbedienung Ersatzfernbedienung**





 














 



 





	Red		Red / Netflix / Search
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-




**Originalfernbedienung Ersatzfernbedienung**



 



























	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

**Originalfernbedienung Ersatzfernbedienung**







	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List	 + 	Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle




**Originalfernbedienung Ersatzfernbedienung**

	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	I>		Shift + Play /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	?		D.Menu / Top
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	[+=]		Sound / Title
	[≡ ≡]		Smart / List
	OPT+		Setup / OPT /
	Edit		Fav / Marker / PC
	Teletext		Text / Goto
	Tv/Radio		TV/Radio /
	Sleep		Sleep / Timer

**Originalfernbedienung Ersatzfernbedienung**

	Source		AV / Input / RDS
	Wide		Zoom / Size
	V-Format		Picture / Format






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	>>		>> / Tune+
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK/List		OK

**Originalfernbedienung Ersatzfernbedienung**

	OK/List		Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-

