
 

 

 



 
 
 
 
 



 

 







 
 
 
 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Out		Mute	
Slow Down		TV/R	
F.Adv		List	
Stop		Stop	
Auto/Track		Options	
Pause		Pause	
Sp/Lp/Speed		3D	
Slow/Dpss-		Shift + Ch -	
Mon/TV		Smart	
Video/Go-To		D. Menu	
VCR/TV		Media	
Menu		Menu	
Slow/Dpss+		Shift + Ch +	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
T.Set/Clock		Red	
Tracking+		Vol +	
Next		>>	
Tracking-		Vol -	
Audio		Dual	
Prev.		<<	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
-/--		Guide	
0		0	
Progr/C/CH		Pre Ch	
On/Off	 + 	Shift + Power	
Record		Rec	
Rewind		<<	
Input Source		AV	
Next Sv+V		Subt	
F.Forward		>>	
Vps/Pdc		Format	
Play		Play	
Count Remain		Yellow	
Set+	 + 	Shift + Vol +	
Counter/Memor		Blue	
Frame Down		Text	
Info/Intro	 + 	Shift + Info	
Counter Clock		Green	
Timer/Sleep		Sleep	
Chan-		Ch -	
Set-	 + 	Shift + Vol -	
Chan+		Ch +	
Eject/Reverse		Eject	
Audio Dub	 + 	Shift + Red	
Encode	 + 	Shift + Green	
X2 Rew/Play	 + 	Shift + Yellow	
P.Back/R.+Play	 + 	Shift + Blue	

