



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|------------|
| | Power | | Power |
| | Input | | AV |
| | Monitor On | | Shift + 1 |
| | Monitor Off | | Shift + 2 |
| | Energy Saving | | Shift + 3D |
| | 3D | | 3D |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | 1/a/A | | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------------|--|--------------|
| | Clear | | Shift + Exit |
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | Mute | | Mute |
| | Auto | | List |
| | ARC | | Media |
| | Brightness/Page | | Ch + |
| | Brightness/Page Down | | Ch - |
| | PSM | | Subt |
| | Home | | Smart |
| | W.BAL | | TV/R |
| | Settings | | Options |
| | S.Menu | | Menu |
| | Back | | Back |
| | Exit | | Exit |
| | Up | | Up |
| | Down | | Down |



