 

 



 

 
 
 
 
 



 











 




 
 
 
 
 

 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Display		Info
	Clock Timer		AV
	Clock Timer SET		3D
	Tuner Memory		1
	Play Mode/Tuning Mode		Shift + Play
	Play Mode/Tuning Mode		2
	Repeat/FM		3
	Repeat/FM		Text
	Tape		Red
	CD		Green
	Tuner Band		Yellow
	DAB		Blue
	Function		Smart
	I<</I-		I<<
	>>I/+		>>I

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Clear		Exit
	EQ		Media
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Album-		Ch -
	Album+		Ch +

