


























 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DVD Menu		D.Menu / Top
	0		0
	OSD / Set Up		Display / Media
	Return		Back / Return
	Up		Up
	OK		OK
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Subtitle		Subtitle / EQ
	Down		Down
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	T-C		Smart / List
	Zoom		Zoom / Size
	I< / <<		I<< / Preset-
	I< / <<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>I / >>		>> / Tune+
	>I / >>		>>I / Preset+
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	Shuffle		Blue / Prime Video / Random

