
 




 
 


 
 






 

 
 





 

 
 
 
 




 
 







 










 






 
 
 
 

 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Media	
Reveal		Smart	
Txt Stop		Stop	
Info	 + 	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio	 + 	Shift + Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text		Shift + Mute
Tone-		<<
On/Tim		Play
Tone+		>>
Off/Tim		Pause
Mix Scan		List
Store Text		Shift + Text
Color+ P.Std		Format

Originalfernbedienung Ersatzfernbedienung

Game Coo		Shift + Eject
Disp		3D
AV 2		Shift + AV
Bright+ Mode		Shift + Menu
Tune-		Shift + Left
Search		Shift + TV/R
Aft/Caf		Shift + Ok
Tune+		Shift + Right
Bright- Sys		Shift + Exit
Contrast+		Shift + Ch +
Store		Options
Color- S.Std		Dual
Contrast-		Shift + Ch -
4.# 16:9		Shift + Format
3.*		Shift + Guide
Surround		Shift + Red
Nicam/Mono		Shift + Green



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Level L	SHIFT + C Shift + Yellow		
Level R/Woofer	SHIFT + D Shift + Blue		

