




 

 



 







 

 



 
 




 

 

 

 

 



 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture	 + 	Shift + Format
	Aspect		Format
	Sleep		Sleep
	Sound	 + 	Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV	 + 	Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	Display		Info
	Input		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	EPG		Guide
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Subtitle		Subt



