

 
 
 



 
 
 
 
 
 

 



 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	P.Mode		Format
	S.Mode		Shift + Dual
	Home		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Q.View		Options
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I/II/Audio		Dual
	P+		Ch +
	P-		Ch -
	Subtitle		Subt
	3D World		3D
	Info		Info
	FAV		Pre Ch
	Screen		Media
	CH List		List
	Menu		Menu
	Guide		Guide
	Back		Back
	Exit		Exit
	Up		Up



