

 



 

 

 

 

 
 
 
 
 


 







 







 






 

 

 
 


 
 

 
 





 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | Power |  | Power |
|  | Eject |  | Eject |
|  | Tv/VCR |  | TV/R |
|  | AV |  | AV |
|  | CM Skip |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | ez Power Off |  | Media |
|  | ez Repeat |  | Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | << |  | << |
|  | Play |  | Play |
|  | >> |  | >> |
|  | Pause/Still |  | Pause |
|  | Stop |  | Stop |
|  | LP |  | Format |
|  | i |  | Info |
|  | OK/CLK/CNT |  | Ok |
|  | Rec/OTR |  | Rec |
|  | Clear |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | C.Lock |  | Blue |

