

 

 
 




 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/AV		AV
	Mute		Mute
	SAT		Smart
	FAV		Pre Ch
	Info		Info
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Pause		Pause
	↑		Ch +
	↓		Ch -
	PR+/Up		Up
	PR-/Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Exit		Exit
	Record		Rec
	Shift		Options





**Originalfernbedienung Ersatzfernbedienung**

	Red/Find		Red
	Green/V-Format		Green
	Yellow/TXT		Yellow
	Blue/Audio		Blue
	Fast >>		>>
	<< Fast		<<
	< Slow		<<
	Slow >		>>
	Play		Play
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**