 



 
 






 




 
 
 





 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Info		Info
	Option		Options
	Setup		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +





**Originalfernbedienung Ersatzfernbedienung**

	Vol-		Vol -
	Mute		Mute
	CH/Page+		Ch +
	CH/Page-		Ch -
	InstaPrevue		Smart
	Favorite Station 1		D. Menu
	Favorite Station 2		Text
	Favorite Station 3		Eject
	Favorite Station 4		AV
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		TV/R
	Bluray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Game		Shift + 6
	AUX2		Shift + 7


 







 











 
 






**Originalfernbedienung Ersatzfernbedienung**

	Phono		Shift + 8
	iPod/USB		Shift + 9
	Media Player		Shift + Guide
	CD		Guide
	Network		Shift + 0
	Internet Radio		Shift + Pre Ch





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	>>		>>
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH/Page+		Ch +
	CH/Page-		Ch -
	Favorite Station 1		D. Menu
	Favorite Station 2		Text
	Favorite Station 3		Eject
	Favorite Station 4		AV





**Originalfernbedienung Ersatzfernbedienung**



 





 













 


 

 


 

	CBL/SAT	 + 	Shift + 1
	DVD	 + 	Shift + 2
	Tv Audio		TV/R
	Bluray	 + 	Shift + 3
	AUX1	 + 	Shift + 4
	Tuner	 + 	Shift + 5
	Game	 + 	Shift + 6
	AUX2	 + 	Shift + 7
	Phono	 + 	Shift + 8
	iPod/USB	 + 	Shift + 9
	Media Player	 + 	Shift + Guide
	CD	 	Guide
	Network	 + 	Shift + 0
	Internet Radio	 + 	Shift + Pre Ch
	Sleep		Sleep

**Originalfernbedienung Ersatzfernbedienung**






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter2		Pre Ch
	Sleep		Sleep
	Play		Play
	I<</Tune-		I<<
	>>I/Tune+		>>I
	<<		<<

**Originalfernbedienung    Ersatzfernbedienung**

	Pause		Pause
	Stop		Stop
	>>		>>
	Back		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Mute		Mute
	Favorite Station 1		D. Menu
	Favorite Station 2		Text
	Favorite Station 3		Eject





### Originalfernbedienung    Ersatzfernbedienung



 
 


	Favorite Station 4		AV
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		TV/R
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Game		Shift + 6
	AUX2		Shift + 7
	Phono		Shift + 8
	iPod/USB		Shift + 9
	Media Player		Shift + Guide
	CD		Guide
	Network		Shift + 0
	Internet Radio		Shift + Pre Ch

### Originalfernbedienung    Ersatzfernbedienung






	Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung
--	-----------------------	---------------------	--	-----------------------	---------------------

	Power		Power		
	CBL/SAT		1		
	DVD		2		
	Tv Audio		TV/R		
	Blu-ray		3		
	AUX1		4		
	Game		5		
	AUX2		6		
	Media Player		7		
	CD		8		
	Sleep		Sleep		

