


 

 
 




 









 

 


 


 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | AV |  | AV |
|  | TV TX |  | Guide |
|  | OK |  | Text |
|  | OK |  | Ok |
|  | Up / CH+ |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------|
|  | Up / CH+ |  | Ch + |
|  | Down / CH- |  | Down |
|  | Down / CH- |  | Ch - |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol + |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol - |
|  | [≡i] |  | Info |
|  | Mix |  | Shift + Text |
|  | Brightness |  | Shift + 1 |
|  | Contrast |  | Shift + 2 |
|  | Color |  | Shift + 3 |
|  | Menu |  | Menu |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |



