














































Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Update	 Play / Slow	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Display	 Display / Media	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Off/Tim		Setup / OPT /
Tune-		<< / Tune-
Audio-		Shift + Vol-
Mix Scan		Smart / List
Audio+		Shift + Vol+
Game Coo		Rec / Rec Mode
Tune+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

Color- S.Std		Sound / Title
Contrast+		>> / Preset+
Contrast-		<< / Preset-
Surround		Eject / Surround
Nicam/Mono		Shift + Audio / Lang I/II
AV 2		Shift + AV / Input / RDS
Bright+ Mode		Shift + CH+ /
Level L		Shift + Left
Level R/Woofers		Shift + Right
Disp		Shift + Display / Media
Bright- Sys		Shift + CH- /

