 



 







 
 
 


 






 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Audio		Dual
	Angle		List
	Zoom		Shift + Eject
	Status		TV/R
	Setup		Options
	Miracast		Media
	Home		Smart
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Search		Shift + TV/R
	Pure Direct		Format
	CD Mode		Text
	Top Menu		Shift + Menu
	Pop-Up Menu		Menu
	Return		Back
	On-Screen		Info
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	Stop		Stop
	Pause		Pause
	Play		Play
	<<I	+	Shift + Left
	I>>	+	Shift + Right
	<<		<<
	>>		>>
	>>I		>>I
	I<<		I<<
	PIP		3D
	2nd Audio	+	Shift + Dual
	Page+		Ch +
	Page-		Ch -
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung

	Shuffle		D. Menu
	Repeat	+	Shift + Text
	A-B		Pre Ch
	Dimmer		Guide
	SA-CD/CD		AV

