 







 




 



















Originalfernbedienung Ersatzfernbedienung

	On Source		Power
	Off		Shift + Power
	Quick Select 1/(DVD)		1
	Quick Select 2/(SAT/CBL)		2
	Quick Select 3/(VCR/iPod)		3
	DVD		4
	TV		5
	iPod		6
	Net/USB		7
	DTU/TU		8
	SAT TU		9
	Play		Play
	Stop		Stop
	Pause/Shift		Pause
	Memory/Skip+/TV Input		Rec
	>> TU		>>
	<< TU		<<

Originalfernbedienung Ersatzfernbedienung

	CH+/>>>I		Ch +
	CH-/I<<<		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	CH Level/HDMI Control		Info
	Setup/Search		Options
	Return		Back
	Source Select/Top Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





Originalfernbedienung Ersatzfernbedienung

	On/Source		Power
	Off		Shift + Power
	Quick Select 1/(DVD)		1
	Quick Select 2/(SAT/CBL)		2
	Quick Select 3/(VCR/iPod)		3
	DVD		4
	TV		5
	iPod		6
	NET/USB		7
	DTU/TU		8
	SAT TU		9
	Play		Play
	Stop		Stop
	Pause/Shift		Pause
	Memory/Skip+/Tv Input		Rec
	>> TU		>>
	<< TU		<<

Originalfernbedienung Ersatzfernbedienung

	CH+ />>>I		Ch +
	CH-/I<<<		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Setup/Search		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok

 


 





Originalfernbedienung Ersatzfernbedienung

	On Source		Power
	Off		Shift + Power
	Quick Select 1/(DVD)		1
	Quick Select 2/(SAT/CBL)		2
	Quick Select 3/(VCR/iPod)		3
	DVD		4
	TV		5
	iPod		6
	Net/USB		7
	DTU/TU		8
	SAT TU		9
	Play		Play
	Stop		Stop
	Pause/Shift		Pause
	Memory/Skip+/Tv Input		Rec
	>> TU		>>
	<< TU		<<

Originalfernbedienung Ersatzfernbedienung

 







 
















	CH+ />>>I		Ch +
	CH- /I<<<		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Setup/Search		Options
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok




Originalfernbedienung Ersatzfernbedienung

	On/Source		Power
	Off		Shift + Power
	Quick Select 1/(DVD)		1
	Quick Select 2/(SAT/CBL)		2
	Quick Select 3/(VCR/iPod)		3
	DVD		4
	TV		5
	iPod		6
	NET/USB		7
	DTU/TU		8
	SAT TU		9
	Play		Play
	Stop		Stop
	Pause/Shift		Pause
	Memory/Skip+/Tv Input		Rec
	>> TU		>>
	<< TU		<<

Originalfernbedienung Ersatzfernbedienung

	CH+/>>>I		Ch +
	CH-/I<<<		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Setup/Search		Options
	Return		Back
	Source Select/Top Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok

