

 

 

 

 
 


 
 
 
 





 

 







 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	AD		Shift + Subt
	Source		AV
	prime video		Shift + Smart
	Netflix		Media

Originalfernbedienung Ersatzfernbedienung

	YouTube		Shift + Media
	Back		Back
	Home		Smart
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[+]		3D
	Info		Info
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung   Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	EPG		Guide
	Audio		Dual
	Subtitle		Subt
	TTX		Text
	<<		<<
	>>		>>
	Rec		Rec
	Play		Play
	Pause/T.Shift		Pause
	Stop/Rec List		Stop

Originalfernbedienung   Ersatzfernbedienung