




Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	Sleep		Sleep
	Dimmer		Blue
	ECO		3D
	BD		1
	GAME		2
	DVR / BDR		3
	DVD		4
	SAT / CBL		5
	HDMI		6
	MHL		Shift + 6
	iPod / USB		7
	CD		8
	ADAPTER		9
	TUNER		Guide
	TV		0
	NETWORK		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	i / Status		Info
	Speakers		List
	PHASE		Shift + 3D
	Signal Sel.		AV
	Auto / Direct		TV/R
	Standard		Format
	Adv. Surr.		Subt
	Mute		Mute
	Tools Menu		Options
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Home Menu		Menu
	iPod Ctrl.		D. Menu
	Return		Back

 

 
 
 

 
 
 

 


 
 
 





 

 
 






Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol +
	Volume-		Vol -
	Pause		Pause
	BAND	 + 	Shift + Play
	Play		Play
	PTY	 + 	Shift + Stop
	Stop		Stop
	+Fav	 + 	Shift + Pre Ch
	Preset -	 + 	Shift + I<<
	I<<		I<<
	Preset+	 + 	Shift + >>I
	>>I		>>I
	Tune-	 + 	Shift + <<
	<<		<<
	Tune+	 + 	Shift + >>
	>>		>>
	Repeat	 + 	Shift + Text

Originalfernbedienung Ersatzfernbedienung

	Random		Text
	Disp	 + 	Shift + Info
	Audio		Dual
	SB CH		Media
	CH Level CH Sel		Smart
	CH Level-		Ch -
	CH Level+		Ch +
	Bass-	 + 	Shift + Down
	Bass+	 + 	Shift + Up
	Treble-	 + 	Shift + Left
	Treble+	 + 	Shift + Right

