



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV		Red
	VCR		Green
	TV / AV		AV
	AUX		Shift + Red
	Tuner / Band		Yellow
	DVD / CD		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	≧10 / -/--		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	Volume +		Vol +
	Volume -		Vol -
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	>> Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		List
	Menu / Play List		Menu
	Up		Up







