




 



 

 





 

 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Prev. Ch.		Pre Ch
	Sleep		Sleep
	Still		Options
	Source		AV

Originalfernbedienung Ersatzfernbedienung

	Aspect		3D
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Info		Info
	Nicam/A2 / Audio		Dual
	Auto		Smart
	P.Mode		Shift + Format
	Menu		Menu
	S.Mode		Shift + Dual
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Index		List
	Cancel		Back
	Reveal		Media
	Hold		TV/R
	Subpage		D. Menu
	TXT		Text
	Size		Format
	Subtitle		Subt

