



Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Mute	 Mute
 USB	 1
 BT	 2
 AUX	 3
 OPT	 5
 Line In	 6
 Vol+	 Vol +
 Vol+	 Up
 Vol-	 Vol -
 Vol-	 Down
 >>I	 >>I
 >>I	 Right
 I<<	 I<<
 I<<	 Left
 Play / Pause	 Ok
 Play / Pause	 Play

Originalfernbedienung	Ersatzfernbedienung
 Play / Pause	 Pause

