 
 








 

 
 

 













Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off	 + 	Shift + Power
	Mute		Mute / Dimmer
	AVR	 + 	Shift + AV / Input / RDS
	DVD	 + 	Shift + 2
	VID1	 + 	Shift + 4
	HDMI1	 + 	Shift + 1
	AM/FM		TV/Radio /
	CD	 + 	Shift + 3
	VID2	 + 	Shift + 8
	HDMI2	 + 	Shift + 6
	AUX	 + 	Shift + 7
	Tape	 + 	Shift + 5
	VID3	 + 	Shift + 0
	HDMI3	 + 	Shift + 9
	Sleep		Sleep / Timer
	Test		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	6CH		Sound / Title
	Vol+		Vol+
	Surr.		Eject / Surround
	OSD		Display / Media
	Vol-		Vol-
	CH./[≡?]		Info / Angle
	SPKR/Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Digital/[≡X]		Setup / OPT /
	Down		Down
	Delay/Prev. CH.		Back / Return
	1		1
	2		2
	3		3







 



 







 


 




 
 




Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	Tun-M/[≡+]		CH+ / Page+
	9		9
	0		0
	Mem/[≡◆]		CH- / Page-
	Tuning ▲		>> / Tune+
	Direct		Smart / List
	Clear		Exit / Cancel / Clear
	Preset ▲		>>I / Preset+
	Tuning ▼		<< / Tune-
	Tone		D.Menu / Top
	RDS		AV / Input / RDS
	Preset ▼		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	Dolby Surr		Blue / Prime Video / Random
	DTS Surr.		Yellow / YouTube / Repeat
	DTS Neo 6		Green / APP / Repeat
	Night		Shift + Sleep / Timer
	Logic 7		Red / Netflix / Search
	Stereo		Audio / Lang I/II
	I<</Skip Down		Shift + I<< / Preset-
	Skip Up/>>I		Shift + >>I / Preset+
	DIM		Shift + Mute / Dimmer
	<< DVD		Shift + << /
	Play DVD		Play / Slow
	>> DVD		Shift + >> /
	Stop DVD		Stop / Hold
	Pause DVD		Pause / Step / Freeze

