



Originalfernbedienung    Ersatzfernbedienung

	POWER		Power
	e		Eco / Aspect
	UP		Up
	LEFT		Left
	MENU		Menu
	MENU		Enter
	RIGHT		Right
	DOWN		Down
	KEYSTONE+		+ / Play
	KEYSTONE+		Shift + Up
	KEYSTONE-		- / Stop
	KEYSTONE-		Shift + Down
	PAGE UP		Vol + / Page +
	PAGE DOWN		Vol - / Page -
	ZOOM		Mode
	RESYNC.		Auto
	SOURCE		Source

Originalfernbedienung    Ersatzfernbedienung

	HIDE		Blank / Mute
	FREEZE		Freeze / Timer

