



**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	Stereo		Shift + Dual
	Cable/Sat		Green
	TV		Blue
	CD		Yellow
	Menu		Menu
	Harman Volume		Smart
	Exit		Exit
	Tone Control		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1

**Originalfernbedienung Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Direct		Guide
	Vol+		Vol +
	Vol-		Vol -
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	Speaker 1		Options
	Speaker 2		Dual





**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep
	Dim		TV/R
	P.Scan		Text
	A.Preset		AV
	MEM		Format
	RDS		Subt
	Prev.CH		Pre Ch
	I<		I<<
	<<		<<<
	>>		>>>
	>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause
	Phono		Shift + 1
	FM/AM		Shift + 2
	USB		Shift + 3

**Originalfernbedienung    Ersatzfernbedienung**

	Bluetooth		Shift + 4
	vTuner		Shift + 5
	Network		Shift + 6
	AUX		Shift + 7
	Digital		Shift + 8







**Originalfernbedienung Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Left		Left
	Right		Right
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+ Stereo		Vol +
	Vol- Stereo		Vol -
	Stereo		Dual

**Originalfernbedienung Ersatzfernbedienung**

	Cable/Sat		Green
	CD		Yellow
	TV		Blue
	Mute		Mute





**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	Mute		Mute
	Stereo		Shift + Dual
	Cable/SAT		Green
	TV		Blue
	CD		Yellow
	Menu		Menu
	Harman Volume		Smart
	Exit		Exit
	Tone Control		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1

**Originalfernbedienung    Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Shift + Exit
	Direct		Guide
	Vol+ Stereo		Vol +
	Vol- Stereo		Vol -
	CH/Tuner Down		Ch +
	CH/Tuner Up		Ch -
	Speaker 1		Options
	Speaker 2		Dual




**Originalfernbedienung Ersatzfernbedienung**

	Sleep		Sleep
	DIM		TV/R
	P.Scan		Text
	A.Preset		AV
	MEM		Format
	RDS		Subt
	Prev.CH		Pre Ch
	I<		I<<
	<<		<<<
	>>		>>>
	>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**


