
 



 




 

 

 

 



 

 



 

 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Subtitle		Subt
	Position		Shift + Media
	Group		Shift + Smart
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>=10 / -/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Disc		Pre Ch
	DD Pro Logic		Smart
	CH Select		Media
	Test		Text
	Super SRND		Ch -
	Top Menu / Direct Navigator		D. Menu
	Top Menu / Direct Navigator		List
	EQ		TV/R
	Menu/Playlist		Menu
	Super Surround		Format
	Display		Info
	Super 3D AI EQ		3D
	AV Effect		AV
	Return		Back
	Up		Up
	Left		Left
	Enter		Ok













Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	VCR (Ext) / VDP (Aux)		Red
	TAPE / Deck 1/2		Green
	DVD		Yellow
	TUNER / BAND		Blue
	Play Mode	 + 	Shift + Play
	Cancel		Exit
	Rev. Play / Pause		Pause
	Stop		Stop
	Play		Play
	<< Slow/Search		<<
	Slow/Search >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Audio		Dual
	Mix 2CH		Eject

Originalfernbedienung Ersatzfernbedienung

	Digital S.Woofler		Ch +
	Muting		Mute
	Volume-		Vol -
	Volume+		Vol +

