







 
 

 







 



 
 
 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | AMP Power |  | Power |
|  | Volume+ |  | Vol + |
|  | Volume- |  | Vol - |
|  | Muting |  | Mute |
|  | Tape 1 |  | Red |
|  | Tape 2 |  | Green |
|  | CD |  | Yellow |
|  | Tuner |  | Blue |
|  | Line |  | Smart |
|  | Phono |  | Media |
|  | CD Power |  | 1 |
|  | Stop CD |  | Stop |
|  | Play CD |  | Play |
|  | >>I CD |  | >>I |
|  | I<< CD |  | I<< |
|  | Tuner Power |  | 2 |
|  | Station+ |  | Ch + |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | Station- |  | Ch - |
|  | Tape Power |  | 3 |
|  | >> Deck 1 |  | >> |
|  | << Deck 1 |  | << |
|  | Disc Select |  | 3D |
|  | > Tape Deck 1 |  | Right |
|  | < Tape Deck 1 |  | Left |
|  | Stop Deck 1 |  | Ok |
|  | Tape Select |  | Back |
|  | > Tape Deck 2 |  | 9 |
|  | < Tape Deck 2 |  | 7 |
|  | Stop Deck 2 |  | 8 |
|  | >> Deck 2 |  | Pre Ch |
|  | << Deck 2 |  | Guide |
| | | | |
| | | | |
| | | | |

