



Originalfernbedienung Ersatzfernbedienung

	Mode		Picture / Format
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Power		Power
	Timer		Shift + Sleep / Timer
	Clock		Smart / List
	I<< / Tune-		Left
	I<< / Tune-		I<< / Preset-
	>>I / Tune+		Right
	>>I / Tune+		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	MEM		Rec / Rec Mode
	Play/Pause / Pair		Pause / Step / Freeze
	Play/Pause / Pair		Play / Slow
	EQ		Subtitle / EQ
	Voice		Sound / Title
	Music		Audio / Lang I/II
	Movie		TV/Radio /
	Bass+		Up
	Treble+		Shift + Up
	CH+		CH+ / Page+
	Vol+		Vol+
	Bass-		Down
	Treble-		Shift + Down
	CH-		CH- / Page-



