







 







 

 

 
 
 



 
 

 







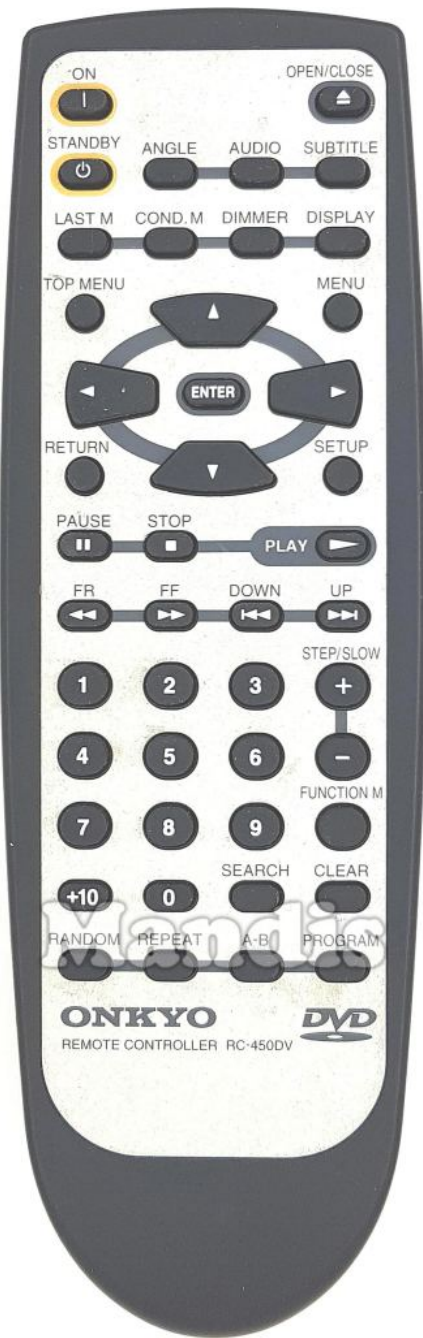 
Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	Open/Close		Eject
	Angle		Red
	Audio		Dual
	Subtitle		Subt
	Dimmer		Blue
	Last M		Smart
	Cond M		Media
	Display		Info
	Menu		Menu
	Return		Back
	Setup		Options
	Top Menu		Shift + Menu
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	>> /Up		>>
	<</Down		<<
	Step/Slow+		Ch +
	Step/Slow-		Ch -
	Function M		D. Menu
	Clear		Exit
	Search		TV/R
	Repeat		Text
	A-B		Green
	Program		Sleep





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Random		Format

Originalfernbedienung Ersatzfernbedienung

