



Originalfernbedienung Ersatzfernbedienung

ON/STANDBY 	ON / STANDBY		Power
INPUT 	INPUT		Source
SET UP 	Set Up		Auto
MENU 	MENU		Menu
MUTE 	MUTE		Blank / Mute
FREEZE 	Freeze		Freeze / Timer
	UP		Up
VOL- 	LEFT		Left
	ENTER		Enter
VOL+ 	RIGHT		Right
	DOWN		Down
RETURN 	RETURN		Mode

Originalfernbedienung Ersatzfernbedienung

