


 

 



 

 

 
 


 
 
 
 
 

 


 











Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Sleep		Sleep
	Clock		Options
	Edit/Check		Info
	PRGM		Shift + Sleep
	Random		TV/R
	Repeat/Mono		Text
	Open/Close		Eject
	1		1
	Disc Direct Play 1		Shift + 1
	2		2
	Disc Direct Play 2		Shift + 2
	3		3
	Disc Direct Play 3		Shift + 3
	4		4
	Disc Direct Play 4		Shift + 4
	5		5

Originalfernbedienung Ersatzfernbedienung

	Disc Direct Play 5		Shift + 5
	6		6
	Disc Direct Play 6		Shift + 6
	7		7
	Disc Direct Play 7		Shift + 7
	8		8
	9		9
	0		0
	+10		Guide
	Karaoke Enter		Ok
	Karaoke		Media
	T.Bass		Dual
	GEQ		Smart
	CD		Yellow
	Video/AUX		Red
	Tuner/Band		Green
	Tape Deck 1/2		Blue





Originalfernbedienung Ersatzfernbedienung

	Play/Direction/Pre set <>		Play
	Tuning Down / << / I<<		<<
	Tuning Down / << / I<<		I<<
	Tuning Up / >> / >>I		>>
	Tuning Up / >> / >>I		>>I
	Stop / Clear		Stop
	Stop / Clear		Exit
	Rec/Rec Mute		Rec
	Pause		Pause
	Set		Menu
	Power		Power
	Volume Down		Vol -
	Volume Up		Vol +

Originalfernbedienung Ersatzfernbedienung

