
 
 



 

 

 


 




 



 
 
 




 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	OK Enter
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info		Rec	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	1
TV/AV		AV	2
Menu		Menu	3
Menu Up		Up	4
Display		Info	5
Menu Left		Left	6
			7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
9			
Guide -/-- 1.			
0/10			
2.Fav P/C 2.			
Red			
Green			
Yellow			
Blue			
Audio+	 + 		

