
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

|   |                 |   |        |
|---|-----------------|---|--------|
|    | Power           |    | Power  |
|    | Video           |    | Red    |
|    | Computer/Storag |    | Green  |
|    | Search          |    | TV/R   |
|    | Aspect          |    | Format |
|    | Auto            |    | List   |
|    | Blank           |    | Info   |
|    | Magnify On      |    | >>     |
|    | Magnify Off     |    | <<     |
|   | Home            |   | Smart  |
|  | End             |  | Media  |
|  | Page Up         |  | Ch +   |
|  | Page Down       |  | Ch -   |
|  | Volume          |  | Vol -  |
|  | Volume          |  | Vol +  |
|  | Mute            |  | Mute   |
|  | Freeze          |  | Pause  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |         |
|---|-------------|---|---------|
|    | My Button 1 |    | 1       |
|    | My Button 2 |    | 2       |
|    | Keystone    |    | Options |
|    | Position    |    | 3D      |
|    | Menu        |    | Menu    |
|    | Up          |    | Up      |
|    | Left        |    | Left    |
|    | Enter       |    | Ok      |
|    | Right       |    | Right   |
|   | Down        |   | Down    |
|  | Esc         |  | Exit    |
|  | Reset       |  | Back    |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |
|   |             |   |         |

