



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Auto
	Ratio		Eco / Aspect
	Input		Source
	Exit		Shift + Menu
	Menu		Menu
	Up		Up
	Left		Left
	OK		Enter
	Right		Right
	Down		Down
	* Brightness		Vol + / Page +
	● Contrast		Vol - / Page -
	Color Adj		Comp / Video
	Mode		Mode
	Sleep		Shift + Power
	Keystone		Shift + Up

Originalfernbedienung Ersatzfernbedienung

	Keystone		Shift + Down
	Still		Freeze / Timer
	Blank		Blank / Mute
	Lamp		+ / Play
	Timer		Shift + Freeze / Timer
	W.Peak		3D / Invert
	Picture		- / Stop

