


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Off Timer		Sleep / Timer
	Guide		Guide / EPG / -/--
	Up		Up
	Tv/AV		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	[≡♦]/F.P.		Smart / List
	[≡i]/Index		Display / Media
	[≡+]/Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	C		Back / Return
	0/VCR		0
	0/VCR		Shift + 4
	i		Info / Angle
	CH+		CH+ / Page+





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	[+]/Aspect		Picture / Format
	N		D.Menu / Top
	Power VCR		Shift + Power
	Rec VCR		Rec / Rec Mode
	Programme Down		Shift + CH- /
	Programme Up		Shift + CH+ /
	<< VCR		<< / Tune-
	>> VCR		>> / Tune+
	Stop VCR		Stop / Hold
	Pause/Step VCR		Pause / Step / Freeze
	Play VCR		Play / Slow

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Rec DVD		Rec / Rec Mode
	Programme Down		CH- / Page-
	Programme Up		CH+ / Page+
	I<< DVD		I<< / Preset-
	>>I DVD		>>I / Preset+
	Stop DVD		Stop / Hold
	Pause/Step DVD		Pause / Step / Freeze
	Play DVD		Play / Slow

Originalfernbedienung Ersatzfernbedienung

