














Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DEL |  | Exit / Cancel / Clear |
|  | TXT |  | Text / Goto |
|  | Menu |  | Menu / Home |
|  | Guide |  | Guide / EPG / -/-- |
|  | Red |  | Red / Netflix / Search |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Rec |  | Rec / Rec Mode |
|  | Picture |  | Picture / Format |
|  | Play / Pause |  | Play / Slow |
|  | << |  | << / Tune- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Stop |  | Stop / Hold |
|  | Play / Pause |  | Pause / Step / Freeze |
|  | >> |  | >> / Tune+ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

