








 








Originalfernbedienung	Ersatzfernbedienung
	Power
	Open / Close
	P/N
	Prog
	Mark
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	10+
	Clear

Originalfernbedienung	Ersatzfernbedienung
	Menu
	Setup
	Up
	Left
	Enter
	Right
	Down
	Title
	OSD
	Stop
	Play/Pause
	Step
	Vol+
	Vol-
	FB
	FF
	Prev





Originalfernbedienung Ersatzfernbedienung

	Next		>>I
	Mute		Mute
	Audio		Dual
	Zoom		Shift + Eject
	Sub-T		Subt
	Goto		Green
	Angle		Red
	Repeat		Text
	A-B		Shift + Text
	Slow		Shift + Play
	Video		Smart
	V-Remote		Media
	Default		Blue

Originalfernbedienung Ersatzfernbedienung

