




 
 

 
 
 
 





 
 
 







 

 








**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	Guide		Guide
	Mute		Mute
	CH List		List
	Vol+		Vol +

**Originalfernbedienung Ersatzfernbedienung**

	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Content		TV/R
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		Ok
	Red		Red
	Green		Green





Originalfernbedienung   Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Alarm		Media
	3D		3D
	Subt.		Subt
	Stop		Stop
	<<		<<
	l<<		l<<
	Play		Play
	Pause		Pause
	>>		>>
	>>l		>>l

Originalfernbedienung   Ersatzfernbedienung