



 
 

 



 











 

 

 



 
















 



 



 


 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Sources		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	AD/SAP		Dual
	Mute		Mute
	Micro		Media
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Home		Smart
	*		Menu
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		Ok
	Wheel Up		>>
	Wheel Down		<<
	Back		Back
	Guide		Guide
	Netflix		Shift + Media
	Source		AV
	prime video		Sleep





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Movies		3D
	Play		Play
	Pause		Pause

