


 

 

 





 
 
 











 






 
 

 
 
 








 



 
 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	l<<		l<<
	>>l		>>l
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Recall		Back
	EPG		Guide
	Menu		Menu
	Sources		AV
	Info		Info
	Smart		Smart
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Smart
	P+		Ch +
	P-		Ch -
	Netflix		Media
	YouTube		Shift + Media
	Red		Red
	Yellow		Yellow
	Green		Green
	Blue		Blue
	V.O.		Dual
	[≡]		Text
	Subt.		Subt

Originalfernbedienung Ersatzfernbedienung

