





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0
	0 / AV		AV / Input / RDS
	Red / Zoom		Red / Netflix / Search
	Red / Zoom		Zoom / Size
	Green / Lang		Green / APP / Repeat
	Green / Lang		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i		Info / Angle
	Text		Text / Goto
	TV		Shift + 1
	TV		TV/Radio /
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu / OK		Menu / Home
	Menu / OK		OK
	Left / Vol-		Vol-
	Left / Vol-		Left
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / P-		Down
	Down / P-		CH- / Page-
	[[]]		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	[?]		Pause / Step / Freeze
	◆		>> / Tune+
	[⏰]		Sleep / Timer
	Rec		Rec / Rec Mode
	[X]		Exit / Cancel / Clear
	[≡i]		Play / Slow

Originalfernbedienung Ersatzfernbedienung



**Originalfernbedienung** **Ersatzfernbedienung**

	Vol-		Vol-
	Vol-		Left
	Vol+		Vol+
	Vol+		Right
	Up		Up
	Up		CH+ / Page+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Down		Down
	Down		CH- / Page-
	Stop		Stop / Hold
	Power DVD		Power

Originalfernbedienung **Ersatzfernbedienung**





Originalfernbedienung **Ersatzfernbedienung**

	Vol+		Right
	Vol-		Vol-
	Vol+		Vol+
	Vol-		Left
	Up		Up
	Up		CH+ / Page+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Down		Down
	Down		CH- / Page-
	Stop		Stop / Hold
	Power VCR		Power

Originalfernbedienung **Ersatzfernbedienung**

