




 



 








 








 







 



 



 

 



 

 

 





 



 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Exit		Exit
	Text		Text
	Audio I/II		Dual
	Display		Info
	Sleep		Sleep
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Red / Source		AV
	Red / Source		Shift + Red
	Green / TV		Menu
	Green / TV		Shift + Green
	Yellow / PMode		Format
	Yellow / PMode		Shift + Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / SMode		Shift + Dual
	Blue / SMode		Shift + Blue
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	-/--		SHIFT + Guide
	Recall		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / Repeat		Blue
	Blue / Repeat		SHIFT + Text
	Subtitle		Subt
	Pause/Play / Hold		Play
	Pause/Play / Hold		Pause
	Size		3D
	Mix		D. Menu
	Reveal		SHIFT + Info
	TXT Index		Eject
	I<< / Subpage		I<<
	>>I / Lang		>>I
	Stop / FAV -		Stop

Originalfernbedienung Ersatzfernbedienung

	Stop / FAV -		SHIFT + Left
	<< / FAV		<<
	<< / FAV		Pre Ch
	>> / FAV+		>>
	>> / FAV+		SHIFT + Right
	EPG		Guide
	USB/SD		Media
	Recorder		Rec
	CH.List		List
	TV / Radio		TV/R

