








 



 

 










 
 









 









 

 



 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Mute		Mute
	Picture		Format
	V.Size		3D
	Source		AV
	Sound		Dual
	S.Mode		Shift + Dual
	Still		Pause
	Digest		Smart
	Pre.PR		Back
	Sleep		Sleep
	Text		Text
	Exit		Exit
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down

Originalfernbedienung Ersatzfernbedienung

	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Menu		Menu
	Menu		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



