


 


 


 





 





 









 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info
	Mute		Mute
	P.Mode		Format
	S.Mode		Dual
	Zoom		Shift + Eject
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung



	Freeze		Pause
	TV/Radio		TV/R
	FAV		Pre Ch
	Source		AV
	Recall		Back
	CH List		List
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	LCD Menu		Menu
	EPG / DVD		Guide




 






Menu



Originalfernbedienung Ersatzfernbedienung

	EPG / DVD		D. Menu
	Audio	 + 	Shift + Dual
	Exit / DVD Setup		Exit
	Exit / DVD Setup		Options
	TXT		Text
	Index / Angle		Smart
	Size		3D
	Subtitle		Subt
	Mix / Open/Close	 + 	Shift + Text
	Mix / Open/Close		Eject
	Play/Pause /		Play
	Stop / Hold		Stop
	A-B / Subpage		Media
	<< / Red		Red
	<< / Red		<<
	>> / Green		>>
	>> / Green		Green

Originalfernbedienung Ersatzfernbedienung

	I<< / Yellow		I<<
	I<< / Yellow		Yellow
	>>I / Blue		>>I
	>>I / Blue		Blue

