







 




 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Eject		Eject
	Sleep		Sleep
	Display		Info
	Tuner / Band		Green
	Function		Options
	I<< / Preset-		I<<
	>>I / Preset+		>>I
	<< / Tuning- / <I Slow		<<
	>> / Tuning+ / Slow I>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	DVD Top Menu / Album-		Ch -
	DVD Top Menu / Album-		Menu
	DVD Menu / Album+		Ch +
	DVD Menu / Album+		D. Menu

**Originalfernbedienung Ersatzfernbedienung**


 



 
 
 


 


 



 
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	DVD Display		Shift + Info
	Return		Back
	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	DVD Set Up		List
	Auto Format		3D
	Night Mode		Format
	Audio		Dual
	Angle		Guide
	Subtitle		Subt
	Repeat		Text




Album+



Originalfernbedienung Ersatzfernbedienung

PLAY MODE	Play Mode	 + 	Shift + Play
TV/VIDEO	TV/Video		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
ENTER	Enter		Pre Ch
CLEAR	Clear		Exit
AMP MENU	AMP Menu		Smart
TUNER MENU	Tuner Menu		Media





 

 
 

 




 

 

 

Originalfernbedienung Ersatzfernbedienung

FM MODE	FM Mode		Red
---------	---------	---	-----





Originalfernbedienung   Ersatzfernbedienung

	Power Tv		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	-/--		Guide
	Enter		Pre Ch
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Tv CH+		Ch +
	Tv CH-		Ch -

Originalfernbedienung   Ersatzfernbedienung