






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Band		Red
	DVD		Green
	AUX		Yellow
	USB		Blue
	VSM		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	XTS Pro		D. Menu
	Marker		Format
	Search		TV/R
	O)))/Audio		Dual
	[...]/Subtitle		Subt
	Sound	 + 	Shift + <<
	Return		Back
	Setup		Options
	Display		Info
	Up/Preset+		Up
	Down/Preset-		Down
	Right/Tun+		Right
	Left/Tun-		Left
	Enter		Ok
	Menu		Menu
	Title		List
	<</Scan-		<<





Originalfernbedienung Ersatzfernbedienung

	>>/Scan+		>>
	Play		Play
	I<</Skip-		I<<
	>>/Skip+		>>I
	Pause/Step		Pause
	Repeat		Text
	Repeat A-B		Shift + Play
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Prog/Memo		Media
	Clear		Exit
	Zoom		Shift + Eject
	RDS		Guide
	Sleep		Sleep
	PTY		Smart

Originalfernbedienung Ersatzfernbedienung

	Dimmer		3D
	Power Tv		Shift + Power
	CH+ Tv		Ch +
	CH- Tv		Ch -
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left
	Mute Tv		Shift + Mute
	Input Tv		AV

