


 















 
 
 

 





 

 



 





 



 



 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Tuner/Band		TV/R
	FM Mode		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide
	CD		Yellow
	I<< CD		I<<






 
Originalfernbedienung Ersatzfernbedienung

	>>I CD		>>I
	Program		Shift + Sleep
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop
	Cancel		Back
	Deck 1/2		Green
	<< Deck		<<
	>> Deck		>>
	Rec Pause Deck		Rec
	< Deck		Left
	Stop Deck		Ok
	> Deck		Right
	On Flat		Smart
	EQ Space Mode		Media
	Balance R		Ch +
	Balance L		Ch -





Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute

Originalfernbedienung Ersatzfernbedienung

