





 




















 






























 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disp		Display / Media
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Mouse		Smart / List
	CH-		CH- / Page-
	P.Mode		Picture / Format
	Home		Shift + Menu /
	S.Mode		Sound / Title
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Enter		OK
	Right		Right
	Netflix		Shift + Red / Netflix /
	Down		Down
	YouTube		Shift + Yellow / YouTube /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	USB		Shift + 8
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

